



HOW TO SET UP A PRESSURE WASH GUN

PRESSURE WASHER GUN SETUP:

Instead of having several guns of differing lance sizes, we setup our guns, with a quick connect at the nozzle end of the pressure washer gun, so that if we need a longer lance or a shorter one, its as easy as changing them out with a push of the quick connect.

PREFERRED LANCE SIZES:

18 inches: Our standard lance sizes include an 18 inch for shooting up close and at times up high with more control.

36 inches: Our everyday lance for up close and wood restoration projects.

79 inches: Many power washers don't carry a 79 inch lance. We however have found at times that the 79 inch lance helps us get a better shot of chemical to 3 story homes and helps with the important task of rinsing.



PRESSURE WASHER GUN TIPS:

The JROD and tri-banger nozzle holders are a great tool to the power washers arsenal. They help keep your tips together and are less prone to breaking then the common plastic tips. Below is our list of nozzle tips and their function:

15 Degree Tips: Usually used on concrete surfaces.

25 Degree Tips: Usually used on wood surfaces.

0 Tip : Used for shooting in a straight line, mostly for rinsing high up places.

Soap Tip : Used for applying our cleaning solution. Most machines will not work without some sort of chemical drawing tip such as a soap tip or a XJet.

